

## HOW TO INSTALL TOP FIX CURTAINS

### Items Checklist

- Curtain panels
- Curtain track
- Bracket
- Bracket screws
- Flick sticks

### Tools Required

- Cordless drill with philips head & 3mm drill bit
- Metal tape measure
- Stud finder
- Pliers
- Pencil


1. Lay your track near the window to check the width and make note of where it will be installed. Lay brackets out on ground in sequence to work out approximately where to install them (about 600mm apart).
2. Use your stud finder to find the ceiling batten for your room. These can potentially run length or width ways in your room. Keep in mind that you'll need to install the brackets 30mm from the wall. Ensure there is a bracket near both ends and the middle of the track. It is important that we install these brackets into the batten in the ceiling.



3. Mark the screw hole location and predrill your holes – look for visible timber shavings as a sign that you are installing into the stud. Remember the screw end of the bracket needs to be 30mm from the wall





4. Screw your brackets into ceiling - make sure the screw isn't done up tight as we need it to be reasonably loose
5. Click the track into the middle bracket. Tighten the bracket screw to fix the track into position. Repeat this for all brackets and check that the track is now secure.

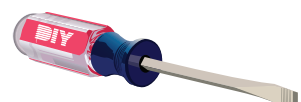

## HOW TO INSTALL TOP FIX CURTAINS

6. Click runners onto the studs on the heading of the curtain. To make this easier, cover a pair of pliers with cloth or tape and use it to click the runners into place

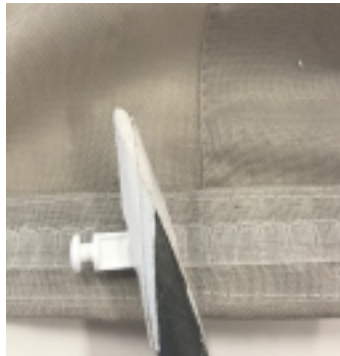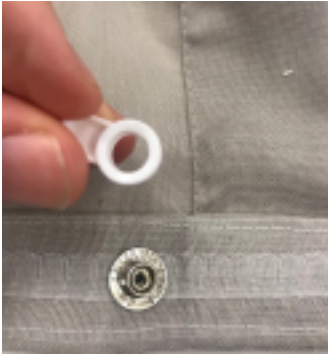

7. Start clicking the runners onto the track from the lead runner to the back, making sure you don't miss any runners as the exact number are supplied. It's important to be careful not to damage the curtain fabric on the ladder or any other sharp edges.



8. Dressing your curtain - Start from the top and fold your curtain to form the ripplefold / s-fold heading. Work your way from the top down, following the shape of the heading with clean hands to form the folds all the way down the drop of the curtain



9. Leave the curtains to sit in the open position to allow for the headings to form.

